




## MODELS 290 & 390

### ASSEMBLY INSTRUCTIONS

**Step 1:** Choose level area for location of the base. Pour sand into pedestal for ballast.

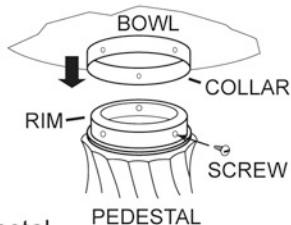

**Step 2:** Set top bowl onto pedestal with the bowl collar around rim of the pedestal. Line up holes in collar and rim. Insert screw into hole and secure bowl to pedestal. Repeat for other holes.

**Note:** In some cases the pedestal bottom may be dented. The dent will come out when sand is poured into the pedestal and will not affect positioning the pedestal upright.

One Year Warranty

**ALLIED PRECISION INDUSTRIES, INC.**  
705 E. North Street, Elburn, IL 60119