



ALLIED PRECISION INDUSTRIES, INC.
705 E. North Street
Elburn, IL 60119

INSTRUCTIONS FOR AUTOFILL BIRDBATH™

Model AF660
Setup and Operation

PATENT PENDING

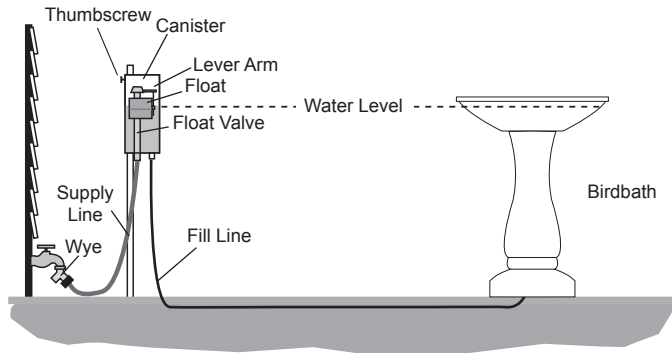


Figure 1

AUTOFILL BIRDBATH PARTS

- Autofill Birdbath and Pedestal
- Assembled KozyFill Canister with Cap and Thumbscrew
- Three (3) pole sections
- 50 ft. of tubing
- Faucet wye with shutoffs
- Faucet-to-tubing Push-in Connector
- Fill Valve Nut
- Cone Washer

AUTOFILL BIRDBATH SETUP

Please read all setup instructions before beginning.

Mount the Canister

1) Determine the location for the KozyFill Canister behind a tree or bush within approximately 20 feet of the birdbath. (Placing it farther away may result in slower filling.) When mounted, the Canister must be at the same level as the birdbath so that must be taken into account when choosing a location. Tap the pointed pole stake firmly into the ground at the desired point and insert the two pole sections such that the assembled pole is vertical. Also, unwind the tubing from the Canister and lay it in the sun to straighten.

2) Once the tubing has straightened in the sun, lay it along the ground for the Fill Line to the birdbath. Allow enough excess to extend up through the Pedestal to the Basin plus an additional 6-10 inches.

Attach the Fill Line

3) Thread the end of the Fill Line with the Flexible Tubing through the bottom of the birdbath Pedestal and out the top (see Figure 2) until it extends about 6 inches out the Pedestal.

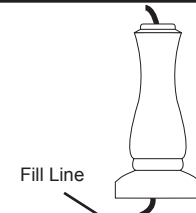


Figure 2

4) Firmly push the end of the Fill Line into the Push-in connector on the bottom of the Basin (Figure 3). It should push in approximately 1/2 inch. After insertion, pull back slightly on the tubing to make sure it is firmly seated.

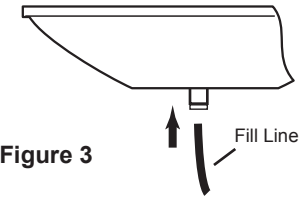


Figure 3

5) Place the basin on the Pedestal by aligning the metal plate on the bottom of the basin with the slots in the neck of the Pedestal. Rotate the basin clock-wise to lock it in place (Figure 4).

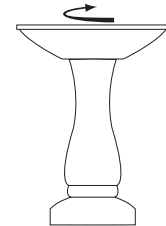


Figure 4

6) Return to the pole (from Step 1) and route the Fill Line so that it extends to the top of the pole. Cut the Fill Line at that point. (Save the excess tubing for Step 8.) Un-screw the Nut on the Fill Line Connector (Figure 5) and insert one end of the Fill Line through the Washer and Collar and then screw the Nut snugly back onto the connector.

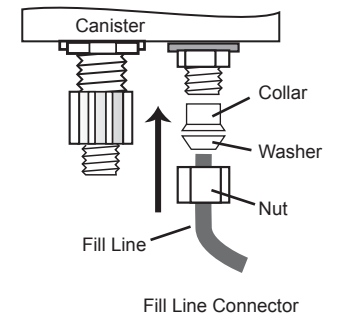


Figure 5

7) Slide the Canister onto the pole and lower it until the the Canister is lower than the rim of the birdbath. Tighten the Thumbscrew to hold the Canister in place (refer to Figure 1).

